

HUBCAP INSTALLATION INSTRUCTIONS

HUBCAP AND ACCESSORIES INSTRUCTIONS




HUBCAP L (left)

HUBCAP R (right)



Hubcap back marked
L (left) and R (right)

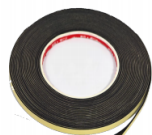

SHOCKABSORBING
COTTON



CENTERPIECES



5. Remove the shock-absorbing foam and apply it slowly along the edges.



6. Installation of shock absorbing foam is complete.



7. Remove the double-sided tape from the back of the centerpiece.



8. Install by pressing on center

INSTALLATION INSTRUCTIONS



1. Remove the original hubcaps; if there are no clips, skip this step.



2. Examine the appearance of the aluminum alloy wheel after removing the



3. Symmetrical model hubcaps, note the back marking L and R to distinguish between left and right.



4. Tip: Plastic snaps and metal snaps have the same installation effect.



9. Compare the position of the reserved valves



10. Press firmly on the edges of the hubcap in sequence so that the hubcap snaps onto the original hub.




11. ★ ★ ★ Tip: Be sure to forcefully snap the center of the hubcap into the stock wheel.



12. When installation is complete, install the other three hubcaps in the same manner.

HUBCAP INSTALLATION INSTRUCTIONS

HUBCAP AND ACCESSORIES INSTRUCTIONS

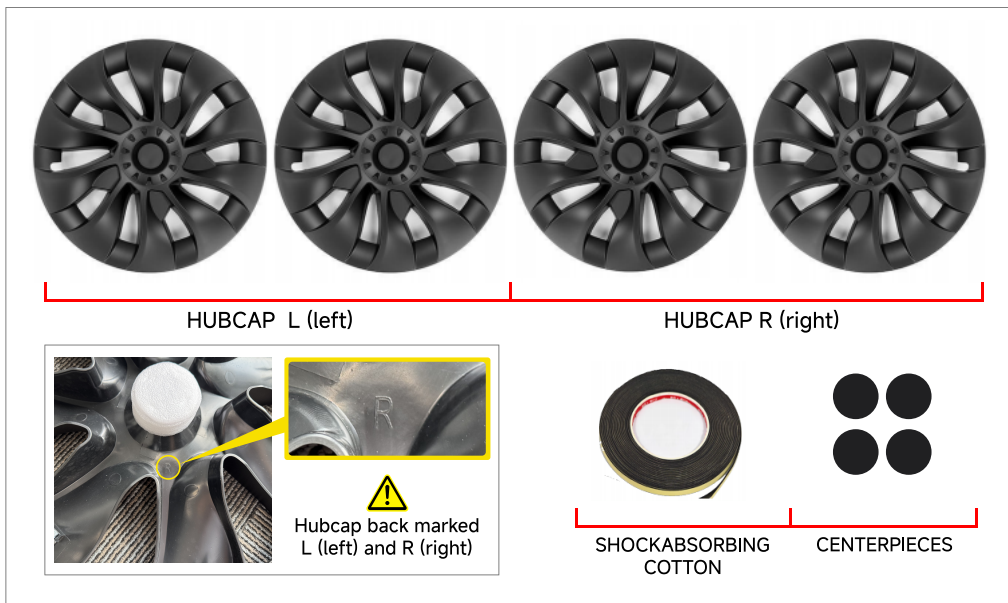

5. Remove the shock-absorbing foam and apply it slowly along the edges.



6. Installation of shock absorbing foam is complete.



7. Remove the double-sided tape from the back of the centerpiece.



8. Install by pressing on center

INSTALLATION INSTRUCTIONS



1. Remove the original hubcaps; if there are no clips, skip this step.



2. Examine the appearance of the aluminum alloy wheel after removing the



3. Symmetrical model hubcaps, note the back marking L and R to distinguish between left and right.



4. Tip: Plastic snaps and metal snaps have the same installation effect.



9. Compare the position of the reserved valves



10. Press firmly on the edges of the hubcap in sequence so that the hubcap snaps onto the original hub.



11. ★ ★ ★ Tip: Be sure to forcefully snap the center of the hubcap into the stock wheel.



12. When installation is complete, install the other three hubcaps in the same manner.